

# AQ100/200/300/400

## ASSEMBLY INSTRUCTIONS:

A: Locate gas lift into five star base/castors.



To bolt seat and backrest together -

B: Turn seat assembly upside down, rest on hard surface and angle as illustrated.

C: Using bolts provided, bolt backrest to seat assembly, bolting through the three locating holes in underseat mechanism into threaded holes in metal back bar with allen key provided. Check tightness of all bolts every three months

D: Turn completed chair top section back over and carefully locate onto gas lift i.e. top of gas lift into circular hole in centre of under-seat mechanism.

Please take care when lifting the chair as it is heavy when assembled and may need two people.

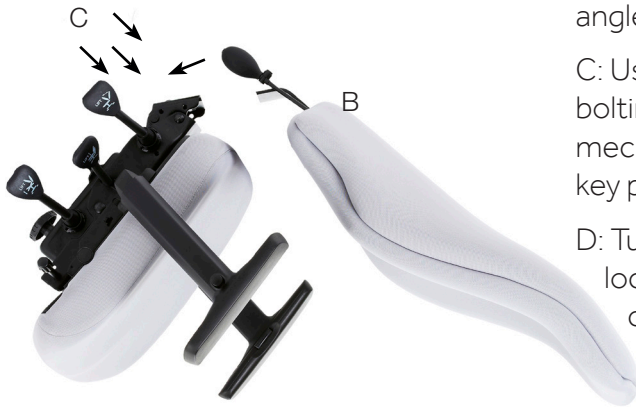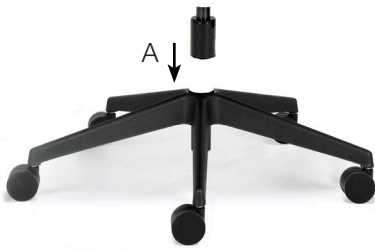

## OPERATING INSTRUCTIONS:

1: Seat Height Adjustment: Raise lever (1) to raise or lower height of seat.

2: Seat Angle Adjustment: Raise lever (2) to set seat angle, push down to lock into desired position.

3: Back Angle Adjustment: Raise lever (3) to set independent back angle, push down to lock into desired position.

4: Seat Tilt Adjustment: Rotate lever (4) clockwise to increase seat tilt, rotate anti-clockwise to decrease seat tilt.

5: Body Weight Tension Adjustment: Wind hand-wheel (5) clockwise to loosen and anti-clockwise to tighten.

6: Seat Slide: Raise lever (6) to alter seat depth by sliding body forward, push down to lock into desired position.

7: Back Height Adjustment: In seated position, raise backrest (7) manually to desired position. Ratchet mechanism will lock into several height positions. When ratchet reaches top, it will release back to the lowest position.

8: Inflatable Lumbar: The hand pump (8) at the rear of the seat will inflate the lumbar when squeezed. Depressing the valve will deflate the lumbar.